USER INSTRUCTIONS

Carrier 10 Charging Station™

Canadian customers, contact Software 4Schools.ca with questions.





ENG

DEU

FRA ITA PRT TRK



Congratulations on your purchase.
Follow these instructions for easy and fast set-up of your Carrier 10 Charging Station.

PC Locs, LocknCharge and the Padlock device are Trademarks of IWS Global Pty Ltd.
Copyright IWS Global Pty Ltd, May 2014.

Disclaimer.

This information is the intellectual property of IWS Global Pty Ltd and may not be distributed, duplicated or copied in part or full without the written permission. Since the use of this information, the equipment connected and the conditions by which any IWS Global product is used is beyond the control of IWS Global, it is the obligation of the owner and/or user to determine the correct and safe use of any equipment and product. To the extent that the law permits, any liability which may be incurred as a result of the use or future use of a product manufactured or sold by IWS Global is limited to the cost of repairing or replacing the failed product or component at the discretion of IWS Global either within, or outside of warranty periods, and does not extend to any loss or damage which may be caused as a consequence of misuse or failure of the equipment or product or the information contained herein. IWS Global shall not in any event be liable for economic loss of profits, indirect, special, bodily injuries or consequential damages.

Specifications and images are for illustration purposes only. Final product may differ and is subject to change without notice.

STEP 1 - Unpacking the Carrier 10 Charging Station

After unpacking, open the door and remove the baskets.






If you have devices that can fit in the plastic baskets, remove the Stainless Steel Device Rack and mat, otherwise leave it in place.

STEP 2 - Removing the Stainless Steel Device Rack

Push the top edge down to release the top of the Stainless Steel Device Rack.



Carefully tilt and lift the bottom of Stainless Steel Device Rack. Avoid scratching the cabinet base.

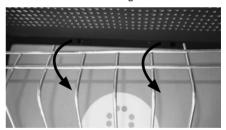


Canadian customers, contact Software4Schools.ca with questions.

STEP 3 - Routing the cables

Open the charge compartment by sliding the lid out. NOTE: Door must be open to slide the lid out.



Push the device connector through the hole and then pull along the rubber grip cable holder.

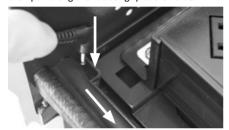

Plug in the device chargers. NOTE: US power outlets pictured for illustration purposes. Country specific outlets will be sent with your product.



Repeat for the remaining device chargers.



STEP 4 - Assembling your devices in the Carrier 10 Charging Station

Place the basket with the devices into the Carrier 10 Charging Station.



Connect the cable to the device.



Canadian customers, contact Software4Schools.ca with questions.

Adjust the cable length to reach your devices.



Neatly bundle the excess cable in the charge compartment. The power strips can be slid along the track to create space.



Close the door and use a padlock to secure.





Loop and neaten the excess cable.



Replace the lid over the charge compartment.



Plug the Carrier 10 Charging Station power cable into the unit, then into the wall socket. Charging will commence automatically (may need to switch the wall outlet "on").



STEP 5 - Mounting the Carrier 10 Charging Station

IMPORTANT: Only a suitably qualified installer may mount this unit. Refer to a structural specialist to determine if the wall you intend to mount this unit on is capable of supporting the fully loaded Carrier 10 Charging Station.

Refer to drilling drawing for correct hole locations.

Note the mounting holes for wall mounting: **TOP**



Note the mounting holes for wall mounting: **BOTTOM**




Note the mounting holes for desk mounting:



STEP 6 - Resetting the Power Strips

If there is a power surge and the power is tripped in the Carrier 10 Charging Station, press the red reset button on each power strip to reset.

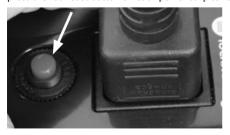

Warranty

PC Locs/LocknCharge warrants the product to be free of defects in design, materials, assembly and craftsmanship for a period of twelve months from the date of purchase to the original retail purchaser. Evidence of original purchase will be required to obtain warranty service.

In the event that a defect, malfunction or failure occurs or is discovered during the warranty period, PC Locs/LocknCharge will repair or replace, at its option, the products which in the reasonable judgment of PC Locs/LocknCharge are deemed defective. All transportation costs shall be borne by the owner and the risk of loss shall be upon the party initiating the transportation.

The warranty does not apply to any product that has been subject to misuse, tampering, neglect, or accident or as a result of unauthorized alterations or repairs to the product. The warranty is in lieu of all warranties expressed or implied, including the implied warranties of merchantability and fitness for a particular purpose which are expressly excluded or disclaimed. In no event will PC Locs/LocknCharge, their directors, officers, employees, or agents be liable for any harm, consequential, incidental, third party, special or indirect damages whatsoever arising out of the use or inability to use the products even if PCLocs/LocknCharge has been advised of the possibility of such damages. PC Locs/LocknCharge obligation is strictly and exclusively limited to the replacement or repair of any defective products. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Compliances and Approvals

CE (Europe)
SAA (Australia)
UL Compliant (USA and Canada)
KCC (Korea) - pending
SIRIM (Malaysia) - pending
SPRING (Singapore) -pending

Canadian customers, contact Software4Schools.ca with questions.

